



EDGERS | GRAND PRIZE™ EDGER




INSTALLATION




Mark & Dig

Mark an outline of your project. Then dig a shallow trench 3" (76mm) deep by 6" (152mm) wide to receive the edging unit.

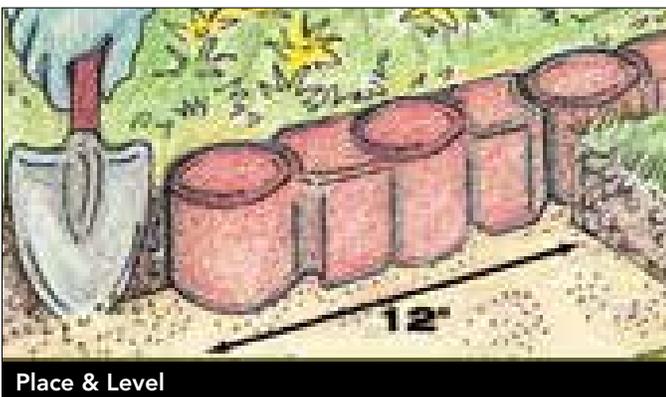

Place & Level

Place units in the trench, over landscape fabric.

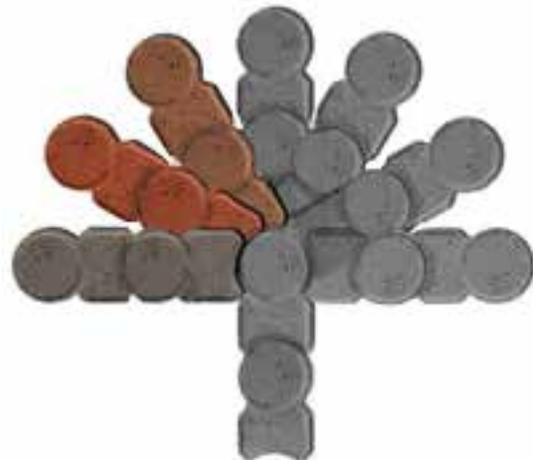

180° Rotation

Lock the ball from one unit into the socket of the next to achieve any angle up to 180°. Curves, radii and corners are a snap!

Use this chart to estimate the number of units you will need.

Units	Linear Project Length									
	5' (1.5m)	10' (3.0m)	15' (4.6m)	20' (6.1m)	25' (7.6m)	30' (9.1m)	35' (10.7m)	40' (12.2m)	45' (13.7m)	50' (15.2m)
	5	10	15	20	25	30	35	40	45	50

FOLLOW US



Keystone Retaining Wall Systems LLC
 4444 West 78th Street • Minneapolis, MN 55435
 (952) 897-1040 • www.keystonewalls.com

©2018 Keystone Retaining Wall Systems LLC

